JUST THROW A COUPLE PIECES OF DOUBLE-SIDED TAPE BETWEEN
THE TWO SIDES OF THE ARM TO STICK THEM TOGETHER

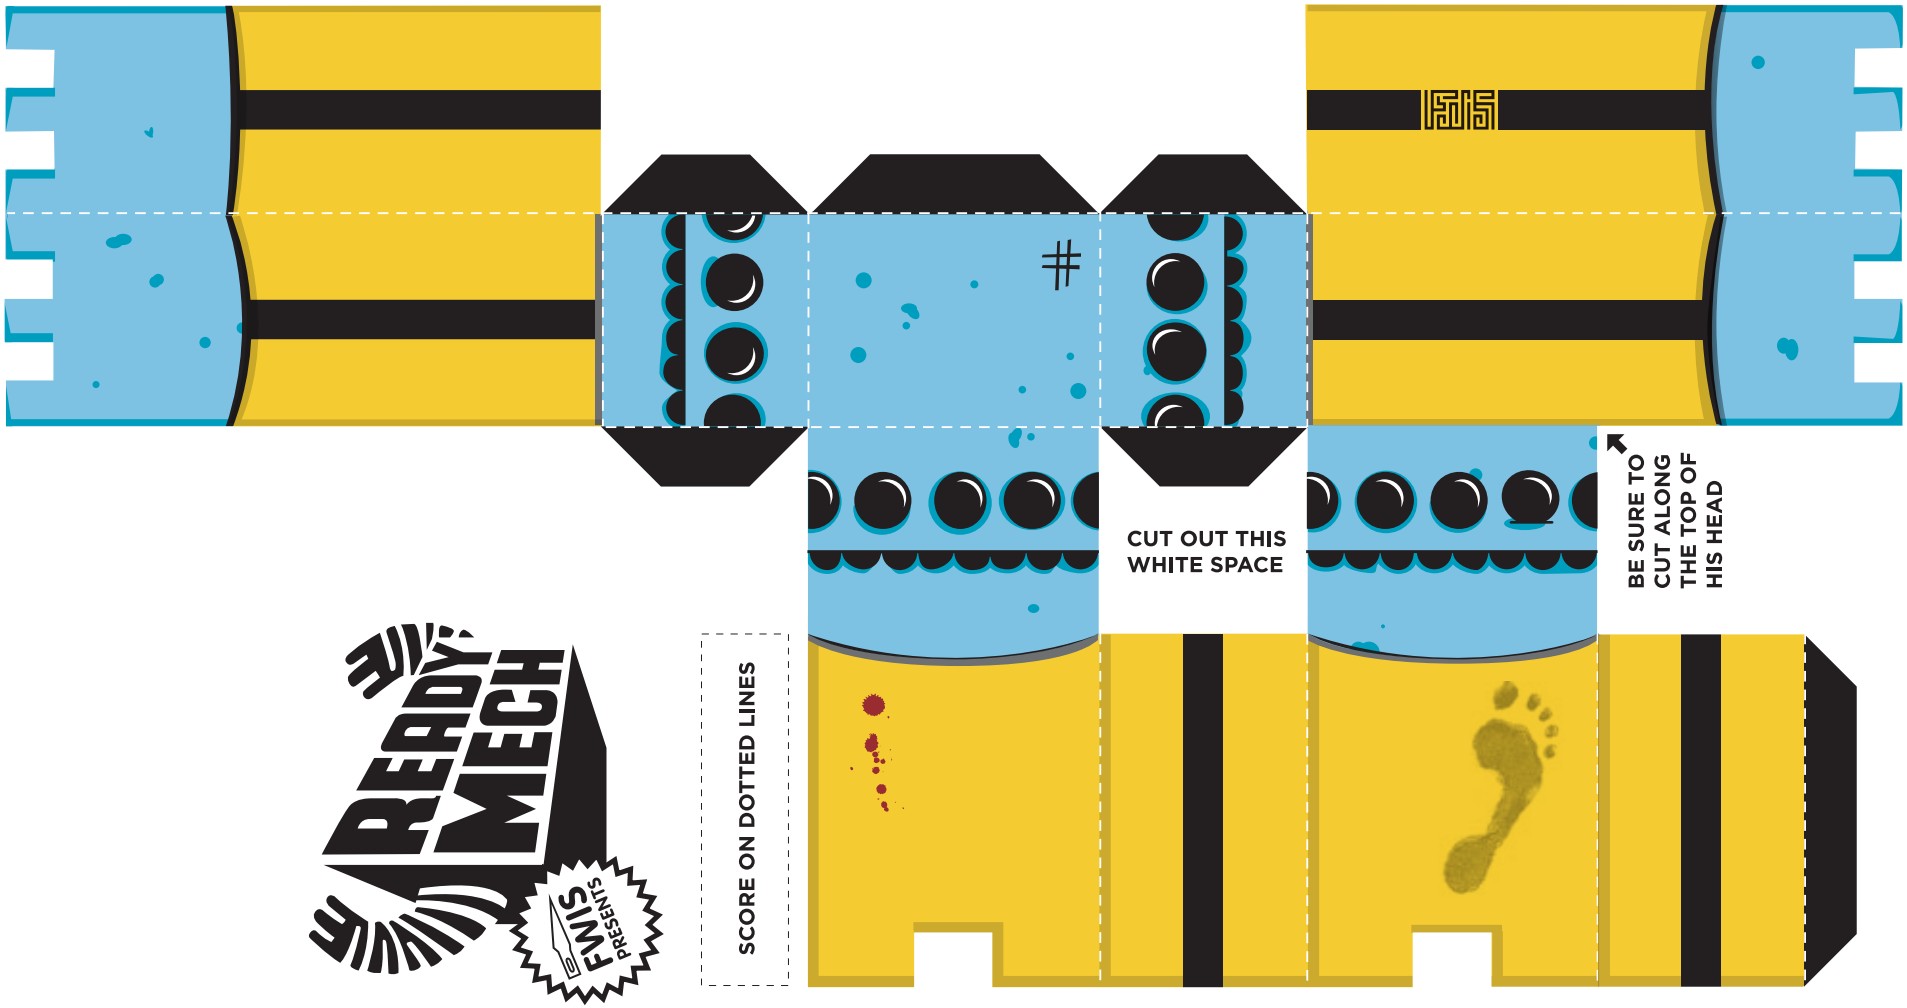

READY MECH
FWIS PRESENTS